

REMOVING THE LOCK 'N' ROLL



Required Tools:

Allen Key:




Torque Wrench:



Procedure:



STEP 1:

Release the nut using an adjustable torque wrench.

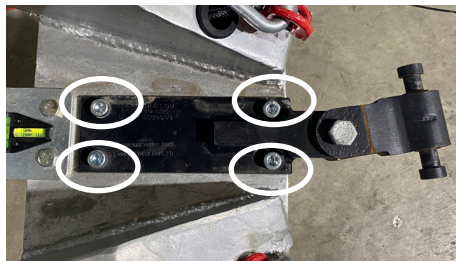

STEP 2:

Using the Allen Key begin removing the bolts while holding the nut. To hold the nut use an adjustable torque wrench or a spanner.

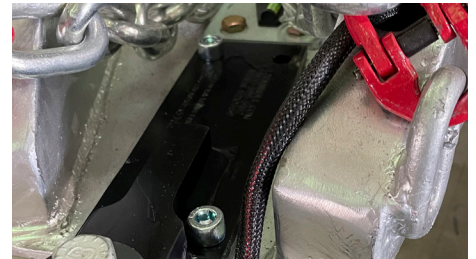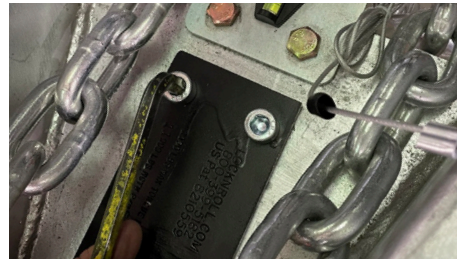

STEP 3:

Once all 4 bolts are removed you can remove the hitch from the chasis.



OPUS Camper USA | www.opuscamper.us | info@opuscamper.us | 925.215.7315

